
PRODUCT 78E0000

Pre-Installation

- 1. Before installation, please ensure that the following work conditions are adhered to:
 - Water temperature between 4°C 50°C.
 - Water pressure between 50kpa 500kpa. Pressure reducing valve is necessary if pressure exceeds 500kpa.
 - Avoid major pressure differences between hot and cold water supply.
- 2. Flush pipes thoroughly before and after installation to ensure water supply is free of any debris.
- 3. Inspect tap fitting. Do not attempt to disassemble fitting on your own.

Installation

- 1. An opening hole of 35mm diameter is required on sinktop or worktop (C) for installation of tap.
- 2. Slide the rubber O-ring (B) over the threaded tube and up to the base of tap (A).
- 3. Insert the threaded tube through the hole of sinktop or worktop (C) and position the tap properly.
- 4. Slide the rubber O-washer (D) and metal O-washer (E) over the threaded tube and up to the underside of sinktop or worktop (C).
- 5. Screw the fixing bushing (F) up to the metal O-washer (E).
- 6. Connect the flexi hoses (G) to the extension tube on one end and the hot or cold water supply on the other end. Please ensure that the hot water supply goes through the hot flexi hose while the cold water supply goes through the cold flexi hose.

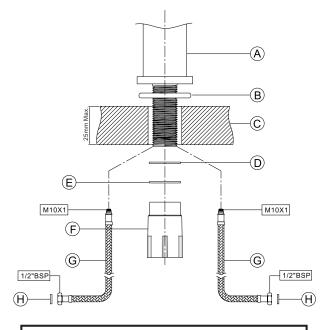

- A Tap Body
- E Metal O-washer
- B Rubber O-ring
- F Threaded fixing bushing
- Sink top or Work top G Flexi hose
- Rubber O-washer H Rubber O-ring for flexi hose

Cleaning Recommendations

- 1. Tap should be cleaned with a soft cloth. Avoid abrasive materials such as steel wool or scourers.
- 2. Do not use any corrosive or abrasive cleaning agents containing acid or scouring agents.

National Warranty Hotline: 07 5596 1833

This installation is only intended as a guide. Any installation inconsistencies or doubts should be checked with a certified plumber. Specification is subject to change without notice.

